


UT Custom ICE BATTERY MOUNT

Second Battery Mount


With Rear Suspension

- 1:QTY 1-UT Custom Battery Sled Mount
- 2:QTY 1-UT Custom Support Arm
- 3:QTY 1 UT Custom NonThreaded "L" Bracket
- 4:QTY 1-M10x85mm Bolt
- 5:QTY 1-M10 Washer
- 6:QTY 1-M5x55mm Bolt
- 7:QTY 1-M5 Washer
- 8:QTY 1-40mm spacer with 5mm hole
- 9:QTY 1-M8x25 Button Head Bolt
- 10:QTY 2-M6x35 Button Head Bolt
- 11:QTY 2-M6 Washers
- 12:QTY 2-M6 Nuts
- 13: QTY 2- 20mm spacers with 6mm hole

PLEASE MAKE SURE ALL HARDWARE LISTED IS INCLUDED BEFORE ASSEMBLY

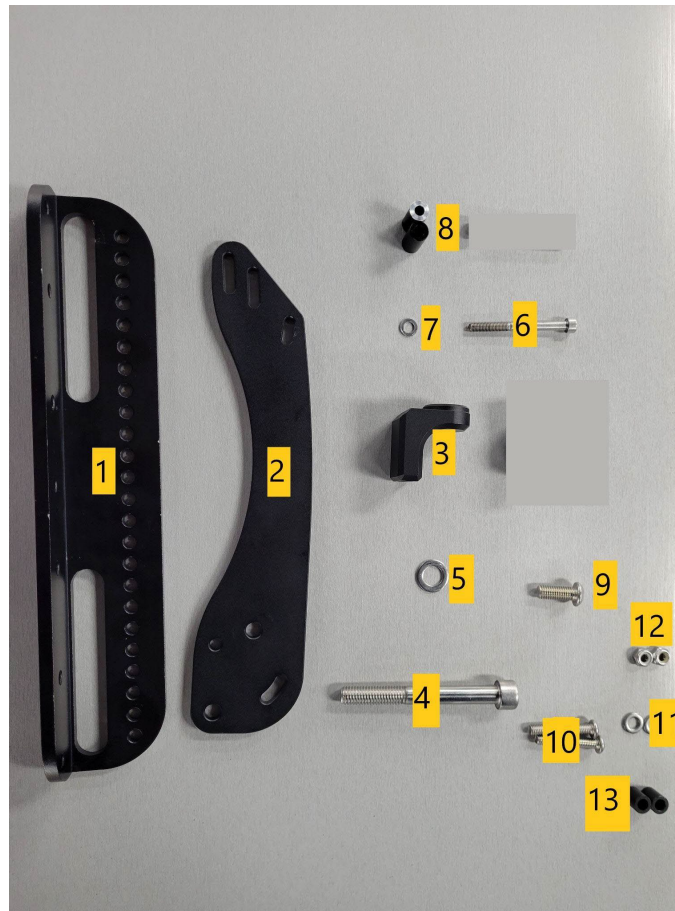

First, install the M10x85mm bolt through the non threaded "L" bracket, then into the left side of the frame pivot and thread into the threaded "L" bracket on the other side of the frame. (Pictured Below)

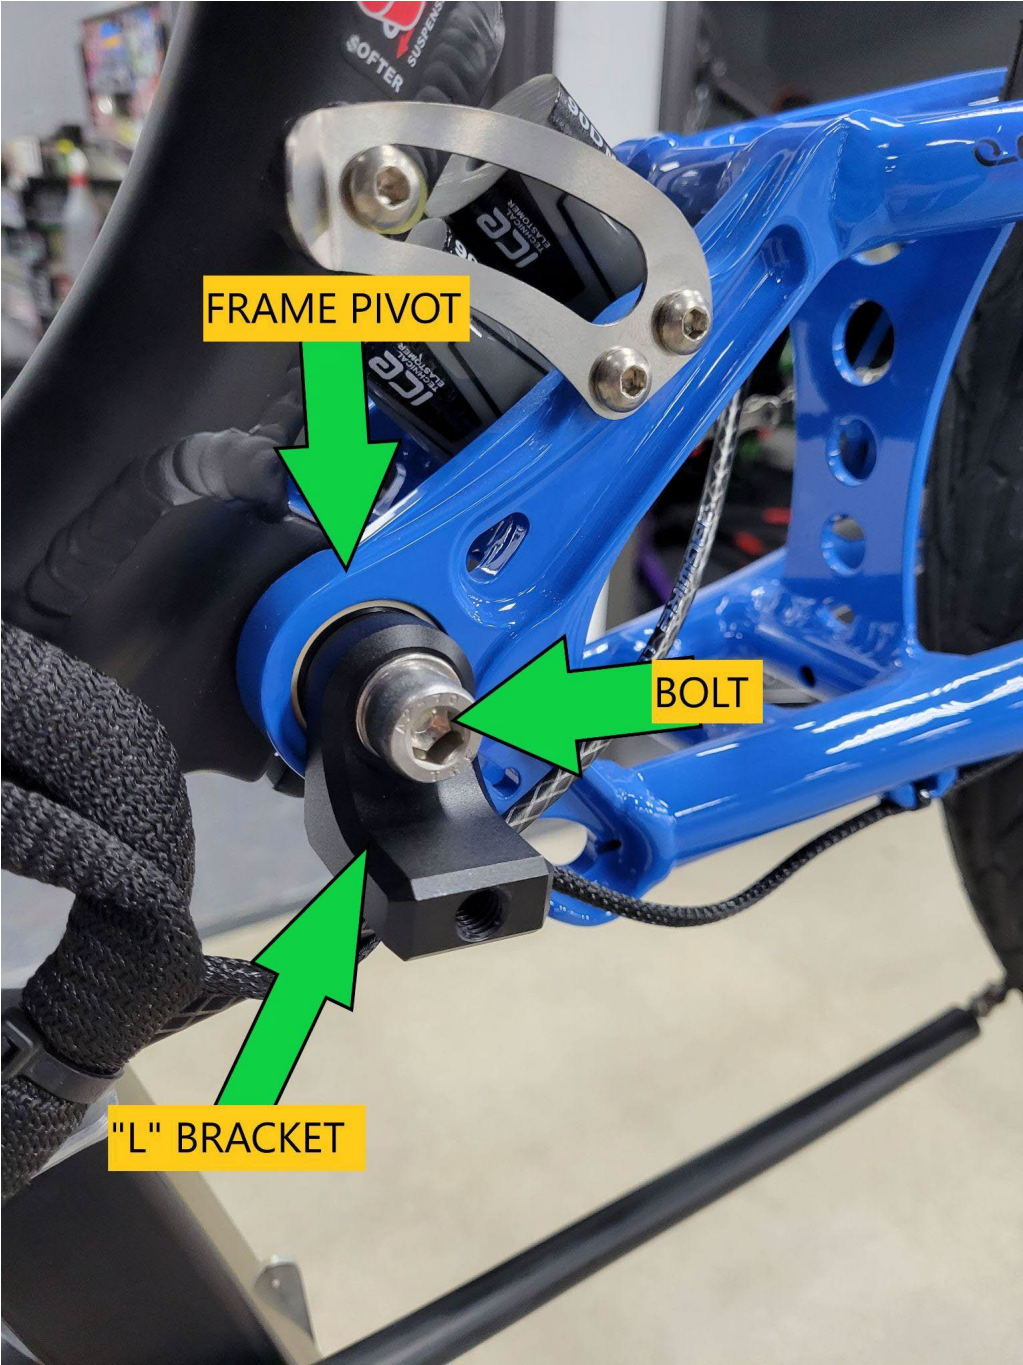

Now you can install the Battery Support Arm and Battery Sled Mount the same as the opposite side.

The lower mount uses the M8x25mm bolt. The upper mount uses the M5x55mm bolt and spacers, and just threads into the 8mm Sleeve in the rack mount on the frame.

(Pictured below)



Make sure everything is tight and secure before installing the battery, and riding.

If you have any further questions or concerns, please give us a call at **866-446-2065** or email trikes@utahtrikes.com

